



# OPERATING MANUAL FOR REACH-IN & MODULAR BLAST CHILLERS, BLAST CHILLER FREEZERS & BLAST FREEZERS

## IMPORTANT INFORMATION (PLEASE RETAIN THIS DOCUMENT)

This Manual covers the installation, operation and routine maintenance requirements for the following Williams Refrigeration products:

WBC/WBCF10	WMBC/WMBCF90	WMBF100	J1BC	WBC40RN
WBC/WBCF20	WMBC/WMBCF120	WMBF200	WBC70	
WBC/WBCF30	WMBC/WMBCF160		WTBC70	
WBC/WBCF40	WMBC/WMBCF200			
WBC/WBCF50	WMBC/WMBCF240			
	WMBC/WMBCF320			

Please read this Manual carefully before connecting the appliance.

Provided the instructions in this Operating Manual are read and implemented correctly, the optimum performance and reliability of your equipment should be maintained.

We assume the installer, user and service provider are appropriately trained, skilled and competent to properly and safely carry out the work, and will use the necessary safety equipment, and take the necessary precautions required of their intended work.

## General Regulations Declaration of Conformity:



Refrigerant Designation	Global Warming Potential
HFC - R134a	1430
HFC - R404a	3922
HFC - R452a	2140

Williams Refrigeration declares that all products manufactured by Williams Refrigeration comply with the above directives applicable to those products, and those products are therefore declared to be in conformity with the provisions of the above legislation.

Model No.: .....

Serial No.: .....



## IMPORTANT SAFETY INFORMATION

---



**Warning:**

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.



**Warning:**

Do not use electrical appliances inside the food storage compartments of this appliance.



**Warning:**

Keep ventilation openings of the appliance enclosure or the structure of built in equipment, clear of obstruction.



**Warning:**

Do not use mechanical devices or other means to accelerate the defrosting process.



**Warning:**

Do not damage the refrigerant circuit, i.e. pipe work or components.

## ELECTRICAL



The appliance must be disconnected from its power source during cleaning; when maintenance and the replacement of parts is required, the equipment must be safely disconnected and isolated from the power supply using a lock-off system at the isolation device.



It is advised that the electrical supply to the equipment is protected by an appropriately selected Residual Current Device (RCD) with a rating no greater than 30mA. RCD's should be tested at least every three months to ensure they are functioning correctly.



If the supply cord is damaged, it must be replaced by a service engineer or other qualified person. Only the supply cord supplied by Williams Refrigeration must be used.



Fixed wiring appliances (those not supplied with a plug) shall incorporate a switch disconnector to meet the specification of IEC 60947; this is to be installed within the fixed wiring installation in accordance to the local wiring rules / regulation to provide all pole disconnection of the power supply.

---

## TEMPERATURE PARAMETERS

---

The Williams range of Reach-In Blast Chillers has temperature parameters set as follows:  
+90°C (194°F) / +3°C (37°F)

The Williams range fo Reach-In Blast Chiller Freezers has temperature parameters set as follows:  
+90°C (194°F) / +3°C (37°F) and +90°C (194°F) / -18°C (0°F)

The Williams range of Modular Blast Chillers, Chiller Freezers and Freezers are designed to blast chill freeze products:

- WMBC** +90°C (194°F) / +3°C (37°F) in 90 minutes or less
- WMBCF** +90°C (194°F) / +3°C (37°F) in 90 minutes or less  
+90°C (194°F) / -18°C (0°F) in 240 minutes or less
- WMBF** +90°C (194°F) / -18°C (0°F) in 240 minutes or less

Also designed to hold product at the following temperatures:

- WMBC** +1°C (34°F) to +3°C (37°F)
- WMBCF** +1°C (34°F) to +3°C (37°F) - Blast Chill Cycle  
-18°C (0°F) to -22°C (-8°F) - Blast Freezer Cycle
- WMBF** -18°C (0°F) to -22°C (-8°F) - Blast Freezer Cycle

# INSTALLATION

## REMOVAL OF REDUNDANT APPLIANCES

Refrigeration appliances contain refrigerant and gases in their insulation and must be disposed of professionally by a licensed waste management contractor.

Please ensure that old or redundant refrigeration appliances are disposed of safely and legally. It is recommended that doors are removed prior to disposal in order to ensure safety.

## UNPACKING

The Roll-in Blast Chillers/Chiller Freezers and Freezers are supplied modular form on pallets and require assembly on site. Please see additional manual on assembly

Remove all external and interior packing and accessories. Ensure all such material is disposed of safely.

Check that no damage has occurred to the appliance, the tubing of the refrigeration system, power cable and plug top during transit. If damage has occurred do not use the appliance.

The appliance should be installed in a well ventilated room on a flat and level floor.

## PROTECTIVE COATING

The polished stainless steel surfaces are protected during manufacturing and transport by an adhesive plastic coating.

This should be removed prior to placing your appliance into use. Carefully peel away to reveal the polished stainless steel surface. Care should be taken to ensure that no adhesive residue remains on the surface. Any stubborn or tough adhesive marks can be removed by following the advice on Page 12.

## VENTILATION

Blast Chillers / Freezers generate a considerable amount of heat and, if operated in a small unventilated room will quickly cause the room temperature to become excessive. This could cause the motor to overheat and possibly damage the compressor. At the very least, such an installation will cause the unit to use an excessive amount of electricity.

In addition to ventilation in a room, please ensure that cabinets with top-mounted systems (**WBC/ WBCF50, WBC70 & WTBC70**) have 500mm clearance between the cabinet top and the ceiling for engineer access and ventilation. For all other

cabinets, please ensure a minimum clearance of 50mm is provided around the unit to ensure efficient and effective performance.

Roof mounted pod storage refrigeration systems require adequate ventilation as well.

**Do not block vents by stacking boxes on top or in front of the unit as this could affect performance and give rise to safety risk.**

## LEVELLING (CASTORS/FEET)

The Reach-in Blast Chillers / Chiller Freezers should stand level to ensure the correct operation of self-closing doors and proper drainage of condensate from the evaporator.

Models fitted with castors are non-adjustable. Therefore a level platform / floor should be provided where the appliance is to be located. Where swivel and brake castors are fitted and it has been positioned, please ensure its brakes have been activated by pressing the metal bar down. Remember to release the brakes before trying to move it.

On models fitted with legs, levelling may be achieved by adjusting the bottom section. For marine specification models with flanged feet for deck and bulkhead fixing, installation should be carried out by a specialist marine company.

## MAINS CONNECTION

**Commercial kitchens and foodservice areas are environments where electrical appliances may be located close to liquids, or operate in and around damp conditions or where restricted movement for installation and service is evident.**

Great care must be exercised at all times when installing, operating or servicing this appliance.

For appliances fitted with a moulded plug, for safety ensure that the mains power cable is extended free from the refrigeration system and cabinet, to avoid entanglement. If a plug or mains cable requires replacement, contact the Williams Spares Office on +44 (0)1553 817017.

The installation of a fixed appliance and periodic inspection should only be undertaken by a qualified, skilled and competent electrician; and connected to the correct power supply suitable for the load as stipulated by the appliance data label.

The electrical installation and connections should meet the necessary requirements to the local electrical wiring regulations and any electrical safety guidelines.

**We recommend:-**

- **Supplementary electrical protection with the use of a residual current device (RCD)**
- **Fixed wiring appliances incorporate a locally situated switch disconnector to connect to, which is easily accessible for switching off and safe isolation purposes. The switch disconnector must meet the specification requirements of IEC 60947**

**If the appliance has been laid on its back or tipped, DO NOT switch on immediately. Leave in an upright position for at least 3 hours before switching on.**

**Your attention is drawn to:-BS 7671:2018 - Guidance note 8 - 8.13 : Other locations of increased risk**

It is recognised that there may be locations of increased risk of electric shock other than those specifically addressed in Part 7 of BS 7671. Examples of such locations could include laundries where there are washing and drying machines in close proximity and water is present, and commercial kitchens with stainless steel units, where once again, water is present.

Where because of the perception of additional risks being likely, the installation designer decides that an installation or location warrants further protective measures, the options available include:

- Automatic Disconnection of Supply (ADS) by means of a residual current device having a residual operating current not exceeding 30mA;
- Supplementary protective equipotential bonding; and
- Reduction of maximum fault clearance time.

The provision of RCDs and supplementary bonding must be specified by the host organisation's appointed installation designer or electrical contractor and installed by a suitably qualified and competent electrician so as to comply with Regulations 419.2 and 544.2. RCD's should be tested at least every three months to ensure they are functioning correctly.

**WBC/WBCF10 & 20** are single phase and come fitted with a moulded plug for safety and must be

earthed. We recommend that should the plug or cable fail contact Williams Spares Office for a replacement part.

**WBC/WBCF30 & 40** are single phase. They should be connected to a 16A single phase supply by a qualified refrigeration engineer or electrician.

**WBC/WBCF50, WBC70 & WTBC70** are 3 phase. They should be connected to a 16A 3 phase and neutral power supply. This should be carried out by a qualified refrigeration engineer or electrician.

**WBC40 RN** should be connected to a 16A 3 phase (no neutral) by a qualified refrigeration engineer or electrician.

**CONNECTION TO A MAIN DRAIN**


All models (except **WBC/WBCF50, WBC70, WBC40RN & WTBC70**) feature automatic evaporation so no drain is required.

**WBC/WBCF50, WBC70, WBC40RN & WTBC70** requires the condensate drain pipe to be connected to a suitable 19mm waste pipe or larger 'P' trap or routing to an open floor drain. (This can be found at the base of the cabinet rear).


**ADJUSTABLE TROLLEY GUIDES (WTBC70)**

The WTBC70 comes with 1 set of adjustable trolley guides.

Depending on the required trolley these should be fitted either to the inside (Lainox) or outside (Rational) set of holes on the underside of the cabinet.

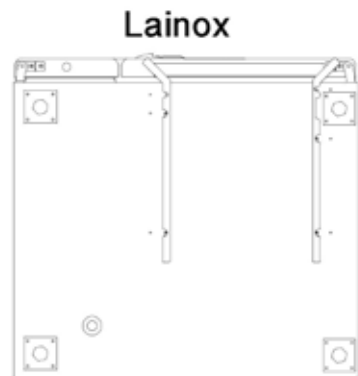

## Rational

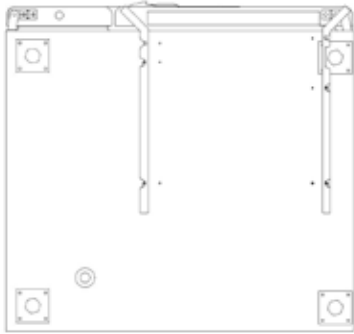


Using the screws that are fitted to the underside of the cabinet, slide the guide on using the key hole slot, then fully tighten the screws.

Once in place, insert the retaining screw at the front of each guide.

### SHELF/SLIDE FITTING

When positioning slides on standard cabinets and counters, present slide to racking by holding it in the opposite hand to the side of the cabinet to that which they are to be applied. Present the slide at a 45° angle (See Figure 1). When in place, let slide drop into position to create a horizontal ledge on which the shelves will sit.

FIG 1.

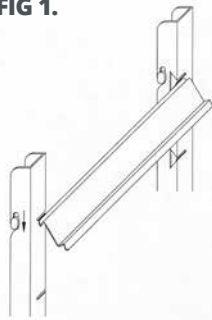

### LOADING / SHELF DISTRIBUTION

**Before loading, allow the appliance to reach its normal operating temperature.**

The maximum temperature of product entering the appliance must not exceed +90°C (194°F). Regulations state that product should be placed in the appliance within 30 minutes from completion of cooking.

The packaging of food and the way in which it is loaded or placed within the equipment can have a significant effect on the time within which the temperature can be reduced to the required level and the amount of food which can be processed in each chilling or freezing batch. (Maximum food thickness 50mm).

When blast chilling always use metal or foil containers which are good conductors. Plastic or

polyurethane containers insulate the food from the cold air. When chilling unportioned food we recommend the use of the appropriate gastronorm tray or similar. Likewise, placing lids or covers on food will also increase the chilling time but may be of some use when processing some delicate foods to avoid dehydration. When blast freezing bear in mind how easy the finished product will be to thaw.

Always load your machine in such a way that it is possible for the cold air to contact all side of the containers. Avoid stacking containers directly on top of one another as this will drastically extend the chilling time and take special care not to block the air ducts.

Always load the machine before selecting the blast facility. Unless it is unavoidable do not open the door of the appliance whilst the blast cycle is engaged.

When loading the appliance / trolley please ensure the load is equally distributed throughout the appliance and ensure air can circulate around and through stored products.

### STORAGE TIMES

Chilled foods can be stored for up to 5 days at between 0°C (32°F) and +3°C (37°F).

Frozen foods can be stored for longer periods, in general for up to 8 weeks without loss of nutrients or palatability. Beyond 8 weeks those foods with a high fat content may display some signs of rancidity. Nevertheless, some other foods can be stored for periods longer than 8 weeks.

Frozen food must be stored at between -18°C (0°F) and -22°C (-8°F) or below.

**Important: Once thawed, frozen food should not be re-frozen.**

# CONTROLLER

## CONTROLLER / DISPLAY

The display should be checked daily to ensure that the correct temperature is being maintained.

## BLAST CHILLER (WBC)



## BLAST CHILLER FREEZER (WBCF)



## BLAST CHILLER (WMBC)



## Principles of Operation

Williams Blast Chillers / Chiller Freezers / Blast Freezers have been designed to quickly reduce the temperature of food in accordance with the Department of Health Guidelines on the chilling and freezing of cooked foods. All operators should be conversant with the latest European Food Safety Legislation.

Further information is also contained in the Williams Guide to Cook Chill which is available from the Williams Marketing Department +44 (0)1553 817000.

Fast temperature reduction is not brought about by placing the food in a very cold cabinet like a deep freeze coldroom for example. This would only dry the food badly and would take a very long time to reduce its temperature to the required level increasing the risk to food safety. The secret of fast temperature reduction is in delivering the correct blast of air and ensuring correct and unobstructed horizontal air flow inside the cabinet.

Williams range of Blast Chillers feature the option of soft and hard facility on blast chill offering flexibility and ensures food stays in prime condition whether it is delicate pastries or fish, or heavier items such as lasagne and meat casseroles.

**Exceptions:** depending on the density types and sizes of the portions the chiller / freezer might not be capable of achieving the required guidelines therefore the load and / or depth of the food layers should be reduced. You may find it necessary, therefore, to experiment with different amounts of food and loading methods in order to achieve the optimum performance with your blast chiller / freezer.

## Operation of Blast Chillers / Chiller Freezers

Initially the appliance will be in a standby mode, shown by 3 dashes (---) in both display windows. The cabinet needs to have run at least half an hour before being used.

All Blast Chillers have 3 basic modes:

1. Blast Chill Soft +1°C (34°F)
2. Blast Chill Hard -10°C (14°F)
3. Default Storage +1°C (34°F) to +3°C (37°F)  
(dependant on selected cycle)

Combination Blast Chiller Freezers have 2 further modes:

4. Freezer Storage -18°C (0°F) to -22°C (-8°F)
5. Blast Freeze -25°C (-13°F)

Dedicated Blast Freezers have the same two modes.

## Store Mode

During store mode (with no alarm condition or defrost cycle running) the left hand window will display the previous blast cycle duration and the right hand window will display the store temperature. Some chillers have more than 1 fan installed these may not all operate during the storage mode, giving a reduced air circulation within the chiller.

The type of store mode is indicated under button **1**. Press button to select the right storage temperature if using the combination chiller freezer.

From store mode the following functions can be achieved:

1. Go into **standby** mode by pressing and holding **0** for 3 seconds.
2. Initiate the setting of a **blast chill or freeze cycle** by pressing **1**
3. Initiate a **manual defrost** by pressing and holding both **X** and **1** for 3 seconds
4. Pressing **3** during a probe cycle will cause all enabled food probes and their respective temperatures can be displayed in a scrolling process (each probe's information is displayed for 4 seconds):



5. Further pressing **3** during a blast cycle will cause the displays to revert back to the standard display (ie time and temperature). Also, cancelling the blast cycle or when the blast cycle ends the display will revert back to the standard food probe display.

If no button is pressed for 10 seconds or if **X** is pressed at any time the cabinet returns to normal store mode.

Function 5 can be initiated in any operating mode except in standby.

## Blast Chill or Freeze Programming

Check that the chiller is operating at storage temperature. Load the products for chilling/freezing - refer to the previous loading information. If using, place the food probe into the centre of the product to be chilled. Then programme the cycle as follows:

1. By pressing button **1** to select the desired type of blast - soft blast (4 blocks), hard blast (2 blocks) or freeze (single block). (Freeze option on Blast Chiller Freezer models only).
2. By pressing button **2** select timer for the desired duration either 90 or if blast freezing 240 minutes or probe (temperature controlled cycle).
3. By pressing button **3** start the blast chill or freeze cycle.

If you are unhappy with your selection press the **X** button to cancel your selections and the appliance will revert back to store mode. Pressing this button will stop the blast chiller mid cycle and will keep the time displayed following cancellation until a new blast cycle is programmed - this will be displayed in the left window.

During defrost or blast cycle it is not possible to enter the blast set mode.



Left window - time counting up



Right window - clockwise rotating LED's signifying a cycle in progress

When a Blast Cycle has been initiated, the following will be displayed:

The blast cycle is ended under normal operation by:

- Reaching the required temperature +3°C (37°F) or -18°C (0°F).
- Reaching the end of the designated time (90 or 240 minutes).
- Manual cancellation of the cycle by pressing **X** and holding for 2 seconds.
- Putting the controller into standby by pressing **0**

A blast cycle may also be terminated due to the following faults or failures:

- Over temperature fault
- HP/LP fault (if enabled)
- Air probe (T1) failure
- Food probe failure - terminates the blast cycle if all the food probes fail. If a 3 probe system is used, and 1 probe fails, the cycle will continue until the last working probe reaches temperature.
- Mains failure longer than 3 minutes



### Continuous Blast (USA Models Option Only)

The LED's beneath the right-hand display window indicate whether or not each enabled food probe has achieved the target temperature (temperature setpoint). If the LED is illuminated, the food probe relevant to that LED is yet to reach the target temperature. Thus, if it is not illuminated, the food probe relevant to that LED is yet to reach the target temperature. Thus, if it is not illuminated, that food probe has achieved the target temperature. The LED will illuminate once more when the temperature relevant to that probe reaches 10°C (10°F) above the target temperature (for example: inserted into hot food).

At the end of a cycle, an audible alarm will sound for 10 seconds with the left window displaying the time and in the right window the LED's will start flashing.

### Defrost

A defrost cycle is automatically instigated at the end of each blast chill cycle to clear any ice from the evaporator ready for the next cycle. During storage mode a defrost will be performed automatically at the factory preset interval of 6 hours. If a blast cycle is cancelled the machine will automatically initiate a defrost.

During a defrost the display windows will indicate

90	dF	Following a blast chill cycle
AL	dF	An alarm condition is present
---	dF	A mains failure has taken place and no blast chill cycle has been initiated since the mains failure

the following:

A manual defrost can be initiated by pressing and holding **3** both and **1**.

During the defrost cycle **all** fans will stop running. When the defrost cycle is finished the compressor will run for approximately 60 seconds before the fans cut in. It is safe to leave products in the cabinet during the defrost cycle - the air temperature rises slightly but will not affect the products stored.

After every defrost there is a short period - about 5 minutes during which a blast cycle cannot be programmed. This short interval is to allow defrost water to drain away from the evaporator. At the end of each cycle, a defrost will automatically clear any ice from the evaporator ready for the next cycle.

### Alarms

When a fault or adverse operational condition arises, an audible and visual alarm will be initiated:

AL	03	General alarm in left window/right window will show mode (storage temperature/blast or defrost)
---	dF	Mains failure alarm in left window/right window will show mode (storage temperature/defrost) (Longer than 3 minutes)

The alarm will sound intermittently. Press **4** to mute the alarm, the alarm will retrigger if the fault causing the alarm has not been addressed. The alarm mode will still be displayed.

More information on the alarm can be displayed during normal operation by accessing the diagnostic menu by pressing and holding **2** for 3 seconds.

AL	E3	Left window indicates alarm / the right window indicates the type of alarm
----	----	--

When a probe is at fault then the windows will display as follows:

T1	or	Left window indicates probe type / the right window indicates the fault type
----	----	--

T1 - air probe	T4 - Food Probe 1
T2 - evaporator	T5 - Food Probe 2
T3 - auxiliary probe (not applicable)	T6 - Food Probe 3


Alarm codes that are displayed are:

- E1** - HP/LP fault (not applicable)
- E2** - Over temperature
- E3** - Mains failure longer than 3 minutes
- Hi** - High temperature
- Lo** - Low temperature
- or** - Probe over range failure

### Alarms during Blast Cycles

If the blast chill cycle has been terminated as a result causing an alarm, a defrost cycle will automatically be initiated. However, if an alarm occurs such as evaporator probe (T2) fault then the blast chill cycle will continue.

**Airflow**

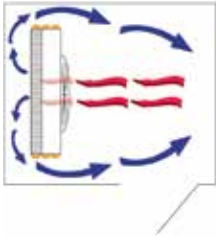

In the unlikely event that your blast chiller is taking longer to perform its chilling cycle, ensure that the airflow is operating in the correct way. See the diagram.

**COMPLEMENTARY COMPRESSOR CONTROL**

In addition to the conventional operation of the compressor, the following complementary function applies;

**Compressor Rest Time**

This function is to ensure that the main compressor used does not run too frequently, and succumb to damage. The parameter “**crt**” can be adjusted accordingly. The compressor rest time does not apply to the beginning of a blast cycle or hot gas defrost cycle.

**Compressor Duty Cycle**

This function performs the task of over-riding the controller’s logic when air probe (**T1**) fails, thus preserving the food until a service engineer intervenes. The parameter “**cdc**” controls the number of forced compressor cycles per hour.

**Example:** If set to 5, the compressor (compressor used for store) will alternate, 5 minutes running, 5 minutes off and so on.

**High Pressure / Low Pressure Control**

To enable the High Pressure / Low Pressure control, the parameter “**PS**” must be set to “**YES**”. Once set the main compressor relay output is additionally controlled by the High Pressure / Low Pressure switch (terminals L3 and L2 in series with terminal L1). If the High Pressure / Low Pressure input goes open circuit, then the main compressor will stop running and an alarm “**E1**” will be displayed.

**NB:** If the High Pressure / Low Pressure input goes open circuit during a hot gas defrost, the alarm is ignored. A subsequent refrigeration cooling cycle will trigger the alarm if the input stays open circuit. If a High Pressure / Low Pressure switch is not fitted then terminals L2 and L3 have to be linked.

**THERMOSTATS AND PROBES**

**Thermostats**

The controller can, via the set of thermostat parameters, control the refrigeration for soft blast chill, hard blast chill and chill store.

All have independent parameters for set points and the two hysteresis parameters are for the chill thermostats and freeze thermostats.

**NB:** The soft blast chill thermostat is a “delta” (floating) value to be added to the store chill thermostat set point to achieve the final soft blast chill thermostat set point.

**Example:** If the store chill thermostat is set to +3°C (37°F), and the soft chill value is set to -2°C (34°F), then the achieved soft blast thermostat will be +1°C (28°F).

**Probes**

The type of probe sensor used for all probes is of the KTY-81-121 type.

The controller will always require the air (T1) and evaporator (T2) probes. The number of food probes is selectable from 0 to 3.

If the number of food probes is set to 1, then only the alarm, diagnostics and temperature controlled blast cycle will be respective to probe (T4). All other food probes (T5 and T6) will be ignored. The auxiliary probes (T3) function can be selected via the parameter “3PM” (default to “no”).

**NB:** If any probe is enabled but not connected, a probe failure will arise. All probes have an offset parameter to compensate for temperature drift and manufacturing tolerances of the probes.

**Do not submerge probe handles into liquids.**

**MISCELLANEOUS FUNCTIONALITY**

**Condenser Clean**

The condenser will require cleaning from time to time. A timer parameter “**Acc**” is used to log the compressor run time (units of weeks). After the preset period a warning is announced.

For the purpose of notifying the user, a designated condenser clean button and LED are used. A flashing red LED signifies that the condenser requires cleaning. Pressing and holding the button for 3 seconds will reset the timer and the LED will stop flashing.

**Display Slow Down**

The purpose of applying a “display slow down” is to delay the real time temperature being displayed on the controllers front control interface. This will avoid rapid fluctuations displayed when a door is opened, or when the controller is “hunting” the instantaneous temperature. This is achieved by introducing a thermal mass simulation routine in the software to simulate a thermal mass inside the chiller. The parameter “SiM” (default to 3) is used, and an example being a value of 100 simulates a 0.5 litre (0.1 Gallon) bottle of water.

## APPLIANCE ROUTINE MAINTENANCE / CLEANING

---

### ROUTINE MAINTENANCE

Regular servicing of the appliance should be undertaken to ensure correct operation, it is functioning as intended and safe to use.

Safely disconnect the appliance from the power supply before cleaning, servicing or undertaking general maintenance.

This appliance must be maintained at regular intervals. The frequency of maintenance will depend upon your specific use and location. The maximum service interval should be 12 months.

Service and maintenance should only be undertaken by suitably qualified, trained and competent engineers.

We recommend servicing in accordance with SFG20 Maintenance Schedules and as a minimum, after **4,500** hours of use, or annually, whichever comes first and that a maintenance contract be arranged with an appointed service contractor. Visits may then be made at agreed intervals to carry out required safety tests, functional checks, adjustments and repairs.

### CLEANING

Always wear appropriate personal protective equipment (PPE) when cleaning the appliance. Care should be taken for parts with possible sharp edges.

Stainless steel is naturally corrosion-proof and needs no additional protective coating to maintain its gloss and usability for a long time.

Abrasive or corrosive cleaning agents should never be used. These can damage surfaces and cause corrosion. They include:

- Cleaners containing chloride;
- Bleaches containing hypochlorite (if accidentally spilled on stainless steel, rinse off with water immediately and thoroughly);
- Silver polish

If the cabinet exterior is looked after correctly it will retain an "as new" finish for many years. A damp cloth is usually sufficient for wiping away light dirt, food debris and finger marks and normal day to day cleaning should be carried out with a soft cloth and soapy water.

White PVC coated panels are more durable, but still should be cleaned with a soft cloth and soapy water.

Dry thoroughly afterwards and where possible

remove all racking, shelving and drawer fittings to aid the process.

Kitchen fats, oil and greases can also cause brown spots or staining to appear on the stainless steel surface.

For stainless steel with visible polishing grains, clean the steel with the grain - not against the grain. When water has been used for leaning or rinsing, wipe the surface dry to prevent water from drying and forming watermarks, especially in areas with hard water. Avoid this type of watermark by using distilled water.

For tougher spots, creamy polishes like CIF original cream can be effective. Light pressure should be used when cleaning with the grain. The cleaning process should be repeated in order to prevent any dirt becoming lodged in the surface grain again.

CIF original cream cleaner can also be used for wiping off water spots and can alleviate discoloration. Remove this type of residue by rinsing with clean, preferably distilled water and wipe away any remaining streaks of polish or watermarks.

Tough grease or oil marks can also be removed using denatured alcohol or acetone. There is no risk of corroding stainless steel by using such solvents. For ease of use limit the amount of solvent used. Wash more than once using a pure solvent on a clean soft rag until all traces of the greasy residue are removed.

### Specialist Stainless Steel Cleaners - Non food contact surfaces only

Innosoft B570 is a special deep cleaner that is suitable for the intensive cleaning of contaminated stainless steel surfaces, and removes stains and oxides in a single operation.

Innoclean B580 completely removes any residues left after the use of Innosoft B570 and passivates the surface which helps to prevent further corrosion.

### SHELF / SUPPORT / RACKING REMOVAL

First remove the shelves, then remove the shelf supports by grasping firmly in the centre and lifting slightly. Turn the shelf support towards the interior of the cabinet by pushing it in the centre as you twist the support through 90°. The shelf support will be released. (NB: the supports are designed to be anti-tilt and you may therefore experience some resistance at first which will be overcome with practice). When all shelves have been removed, remove the racking by lifting up and over the nylon retaining blocks.




### CONDENSER CLEANING

#### (Only applicable to Air Cooled Units)

Regular maintenance should be carried out on a regular basis by competent / trained personnel. The condenser is part of the refrigeration unit and is located in the unit compartment.

Brush fins vertically with a stiff brush, taking care not to damage them or to push dirt / dust further in, and then vacuum away.

FIG 2.

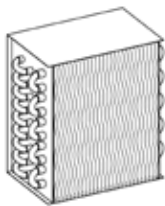

To cancel the flashing LED, press and hold **3** for 3 seconds.

If there are further grease deposits still remaining on the condenser call your Service Provider to carry out a full service.

**Note: Non-compliance may invalidate your Warranty.**


### REMOVING THE UNIT COVER

Remove the screws in the top and bottom edge of the unit cover and pull the unit cover away from the unit and retaining clips.

### CLEANING / REPLACING THE GASKET

Door gaskets should be checked and cleaned regularly and replaced if damaged. To clean the gasket, wipe with warm soapy water and a soft cloth, ensuring it is completely dry before closing the door.

**DO NOT** use a sharp knife to clean or scrape the gasket. Damaged gaskets do not seal correctly and can increase the amount of electricity consumed, seriously affecting the efficiency and performance of the appliance.

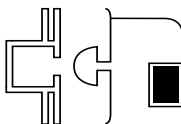

Damaged gaskets are easily replaced. Simply pull out the existing part and push the new gasket into the channel (gasket retainer) at the centre and work along, pushing gasket into channel.

### EVAPORATOR/DRAINLINE

Inspect periodically to ensure the drain hole is not blocked.

### BREAKDOWN

You must immediately report any damage or defect arising with the appliance. Unsafe equipment is dangerous. Do not use the appliance. Isolate the power supply and contact Williams Refrigeration or your appointed Service Provider.

In the event of a breakdown, please contact Williams Refrigeration or your Service Provider

When calling, please advise model and serial number. This information can be found on the data plate inside the appliance. It should also be noted on the cover of this Manual. Please ensure that all redundant parts are disposed of safely and legally.

# ENERGY INFORMATION

The following information only applies to Reach-In Models.

<b>Model(s):</b>		<b>WBCF10</b>	
<b>Type of Product:</b>		Blast Chiller / Freezer	
<b>Refrigerant Fluid(s):</b>	R404A / R452A	<b>GWP:</b>	3922 / 2140
<b>Blast Chill Cycle:</b>		YES	
<b>Blast Freeze Cycle:</b>		YES	
ITEM	Symbol	Value	Unit
<i>Energy Consumption for Chilling Function</i>	E	0.152	kWh/kg
<i>Chilled Full Load Capacity</i>		10	kg
<i>Energy Consumption for Freezing Function</i>	E	1.7	kWh/kg
<i>Frozen Full Load Capacity</i>		1.238	kg
<b>Refrigerant Charge</b>		0.825	kg
<b>Blast Chilling Cycle from +65°C to +10°C</b>	<i>t</i>	99	min
<b>Blast Chilling Cycle from +65°C to -18°C</b>	<i>t</i>	179	min
<b>Contact Details:</b>	Williams Refrigeration, 9 Bryggen Road, North Lynn Industrial Estate, King's Lynn, Norfolk. PE30 2HZ		

<b>Model(s):</b>		<b>WBCF20</b>	
<b>Type of Product:</b>		Blast Chiller / Freezer	
<b>Refrigerant Fluid(s):</b>	R404A / R452A	<b>GWP:</b>	3922 / 2140
<b>Blast Chill Cycle:</b>		YES	
<b>Blast Freeze Cycle:</b>		YES	
ITEM	Symbol	Value	Unit
<i>Energy Consumption for Chilling Function</i>	E	0.108	kWh/kg
<i>Chilled Full Load Capacity</i>		20	kg
<i>Energy Consumption for Freezing Function</i>	E	0.878	kWh/kg
<i>Frozen Full Load Capacity</i>		5	kg
<b>Refrigerant Charge</b>		1.4	kg
<b>Blast Chilling Cycle from +65°C to +10°C</b>	<i>t</i>	77	min
<b>Blast Chilling Cycle from +65°C to -18°C</b>	<i>t</i>	244	min
<b>Contact Details:</b>	Williams Refrigeration, 9 Bryggen Road, North Lynn Industrial Estate, King's Lynn, Norfolk. PE30 2HZ		

<b>Model(s):</b>		<b>WBCF30</b>	
<b>Type of Product:</b>		Blast Chiller / Freezer	
<b>Refrigerant Fluid(s):</b>	R404A / R452A	<b>GWP:</b>	3922 / 2140
<b>Blast Chill Cycle:</b>		YES	
<b>Blast Freeze Cycle:</b>		YES	
ITEM	Symbol	Value	Unit
<i>Energy Consumption for Chilling Function</i>	E	0.12	kWh/kg
		30	kg
<i>Energy Consumption for Freezing Function</i>	E	1.202	kWh/kg
<i>Frozen Full Load Capacity</i>		5	kg
<b>Refrigerant Charge</b>		2.05	kg
<b>Blast Chilling Cycle from +65°C to +10°C</b>	<i>t</i>	78	min
<b>Blast Chilling Cycle from +65°C to -18°C</b>	<i>t</i>	219	min
<b>Contact Details:</b>	Williams Refrigeration, 9 Bryggen Road, North Lynn Industrial Estate, King's Lynn, Norfolk. PE30 2HZ		

# ENERGY INFORMATION

The following information only applies to Reach-In Models.

<b>Model(s):</b>		<b>WBCF40</b>	
<b>Type of Product:</b>		Blast Chiller / Freezer	
<b>Refrigerant Fluid(s):</b>	R404A / R452A	<b>GWP:</b>	3922 / 2140
<b>Blast Chill Cycle:</b>		YES	
<b>Blast Freeze Cycle:</b>		YES	
	<b>ITEM</b>	<b>Symbol</b>	<b>Value</b>
<b>Energy Consumption for Chilling Function</b>		E	0.096
<b>Chilled Full Load Capacity</b>			40
<b>Energy Consumption for Freezing Function</b>		E	1.372
<b>Frozen Full Load Capacity</b>			5
<b>Refrigerant Charge</b>			2.05
<b>Blast Chilling Cycle from +65°C to +10°C</b>		t	100
<b>Blast Chilling Cycle from +65°C to -18°C</b>		t	231
<b>Contact Details:</b>	Williams Refrigeration, 9 Bryggen Road, North Lynn Industrial Estate, King's Lynn, Norfolk. PE30 2HZ		

<b>Model(s):</b>		<b>WBCF50</b>	
<b>Type of Product:</b>		Blast Chiller / Freezer	
<b>Refrigerant Fluid(s):</b>	R404A / R452A	<b>GWP:</b>	3922 / 2140
<b>Blast Chill Cycle:</b>		YES	
<b>Blast Freeze Cycle:</b>		YES	
	<b>ITEM</b>	<b>Symbol</b>	<b>Value</b>
<b>Energy Consumption for Chilling Function</b>		E	0.078
<b>Chilled Full Load Capacity</b>			50
<b>Energy Consumption for Freezing Function</b>		E	0.6785
<b>Frozen Full Load Capacity</b>			20
<b>Refrigerant Charge</b>			3
<b>Blast Chilling Cycle from +65°C to +10°C</b>		t	109
<b>Blast Chilling Cycle from +65°C to -18°C</b>		t	270
<b>Contact Details:</b>	Williams Refrigeration, 9 Bryggen Road, North Lynn Industrial Estate, King's Lynn, Norfolk. PE30 2HZ		

<b>Model(s):</b>		<b>J1BC</b>	
<b>Type of Product:</b>		Blast Chiller	
<b>Refrigerant Fluid(s):</b>	R134A	<b>GWP:</b>	1430
<b>Blast Chill Cycle:</b>		YES	
<b>Blast Freeze Cycle:</b>		NO	
	<b>ITEM</b>	<b>Symbol</b>	<b>Value</b>
<b>Energy Consumption for Chilling Function</b>		E	0.1
<b>Chilled Full Load Capacity</b>			20
<b>Energy Consumption for Freezing Function</b>		E	
<b>Frozen Full Load Capacity</b>			kg
<b>Refrigerant Charge</b>			2.1
<b>Blast Chilling Cycle from +65°C to +10°C</b>		t	108
<b>Blast Chilling Cycle from +65°C to -18°C</b>		t	min
<b>Contact Details:</b>	Williams Refrigeration, 9 Bryggen Road, North Lynn Industrial Estate, King's Lynn, Norfolk. PE30 2HZ		

<b>Model(s):</b>	<b>J1BCF</b>		
<b>Type of Product:</b>	Blast Chiller		
<b>Refrigerant Fluid(s):</b>	R404A / R452A	<b>GWP:</b>	3922 / 2140
<b>Blast Chill Cycle:</b>	NO		
<b>Blast Freeze Cycle:</b>	YES		
<b>ITEM</b>	<b>Symbol</b>	<b>Value</b>	<b>Unit</b>
<b>Energy Consumption for Chilling Function</b>	E	0.1	kWh/kg
<b>Chilled Full Load Capacity</b>			kg
<b>Energy Consumption for Freezing Function</b>	E	1,052	kWh/kg
<b>Frozen Full Load Capacity</b>		5	kg
<b>Refrigerant Charge</b>		1.8	kg
<b>Blast Chilling Cycle from +65°C to +10°C</b>	t		min
<b>Blast Chilling Cycle from +65°C to -18°C</b>	t	270	min
<b>Contact Details:</b>	Williams Refrigeration, 9 Bryggen Road, North Lynn Industrial Estate, King's Lynn, Norfolk. PE30 2HZ		

<b>Model(s):</b>	<b>WBC70</b>		
<b>Type of Product:</b>	Blast Chiller		
<b>Refrigerant Fluid(s):</b>	R452A	<b>GWP:</b>	2140
<b>Blast Chill Cycle:</b>	YES		
<b>Blast Freeze Cycle:</b>	NO		
<b>ITEM</b>	<b>Symbol</b>	<b>Value</b>	<b>Unit</b>
<b>Energy Consumption for Chilling Function</b>	E	0.163	kWh/kg
<b>Chilled Full Load Capacity</b>		55	kg
<b>Energy Consumption for Freezing Function</b>	E		kWh/kg
<b>Frozen Full Load Capacity</b>			kg
<b>Refrigerant Charge</b>		3	kg
<b>Blast Chilling Cycle from +65°C to +10°C</b>	t	115	min
<b>Blast Chilling Cycle from +65°C to -18°C</b>	t		min
<b>Contact Details:</b>	Williams Refrigeration, 9 Bryggen Road, North Lynn Industrial Estate, King's Lynn, Norfolk. PE30 2HZ		



### CHOOSING GENUINE SPARE PARTS

Choosing the correct spare parts is vital to the ongoing running of your appliance - that's why Williams Refrigeration offer a comprehensive network of servicing, support and spare parts all available directly from Williams.

Our spare parts are exactly the same quality and standard as we use to build your appliance and have been rigorously checked, tested and inspected to ensure the very best quality and exact fit.

You can contact us directly for everything from fault diagnosis to parts selection and ordering. Simply provide the serial number of your appliance and we will do the rest to ensure you receive the right part first time.

**For further information please call our Spares Department on 01553 817017  
or email [spares@williams-refrigeration.co.uk](mailto:spares@williams-refrigeration.co.uk)**

## PARTS & LABOUR WARRANTY POLICY - UK ONLY

Our warranty applies to equipment manufactured by Williams Refrigeration and equipment bearing the Williams name plate and serial number identification tag.

We undertake, in conjunction with the supplying agent, distributor or representative, to repair free of charge during our standard business hours any such piece of equipment or part thereof used which is found to be faulty in either materials or workmanship subject to the further conditions below:-

### WARRANTY TERMS AND PRODUCTS COVERED

We offer a **24 months Warranty** from our original date of sale with the following Williams equipment:

1. Garnet / Zircon / Jade / Amber (stainless) / Mobile Heated/ Mobile Refrigerated.
2. Reach-in Blast Chillers / Reach-in Blast Chiller Freezers / Blast Chiller WTBC70.
3. Opal / Emerald / Onyx / Aztra / Salad Counters / UBC / Chef's Drawers / Fry Station Drawer.
4. Crystal Bakery Cabinets.
5. Meat Ageing Refrigerator.
6. Medi+ Cabinets.

We offer a **12 months Warranty** from our original date of sale for all other Williams equipment including:

1. All Modular Products (including coldrooms).
2. Remote Systems.
3. Bottle Coolers / Glass Froster.
4. GEM Multidecks (including heated) and merchandiser cases.
5. GEM product range.
6. Bottle Well / Meat Freezer Well.
7. Thermowell.
8. Non standard and other products.
9. Front of House display cases.
10. White Goods.

### WARRANTY TERMS

Our warranty is offered where the equipment has been installed correctly and has not been subject to misuse or abuse and is functioning correctly.

The equipment was purchased by the authorised supplying distributor direct from Williams Refrigeration and not through a wholesaler or other supplier whose warranty terms may be different.

The Warranty Policy shall be non-transferable.

Replacement of defective equipment can only be made with the approval of Williams Refrigeration.

Any repair under warranty will only be carried out with the product in its position of operation or in a suitable location on the customer's premises. If the product has to be removed for security or any other reason, this will be subject to additional charge (may include hydrocarbon charged equipment).

Warranty work will be covered by Williams Refrigeration or by one of its appointed service agents between the hours of 8.00am and 5.00pm Monday to Friday. Any works undertaken outside of these hours are chargeable.

### RESPONSE TIME

We aim to respond to all warranty calls within 3 working days and will endeavour to respond next working day where practical.

### CLAIMS PROCEDURE

If a customer wishes to make a claim under the terms of this warranty, the following procedure should be observed:

1. Contact the supplying agent, representative or distributor.
2. Quote the equipment model, serial number and date of installation. The serial number is located on the product identification plate inside the cabinet, modular product door frame or similar location. It is recommended that operators should also record the serial number on the operating instruction booklet supplied with the product.
3. Contents risk and insurance responsibility remains at all times with the customer.

### EXCEPTIONS TO STANDARD WARRANTIES

1. The Standard warranty applies to equipment located in Mainland GB only and excludes locations subject to restricted or secure access, offshore and marine applications.

Additional time and travel charges may be applied to the following locations – Isle of Wight, Channel Islands, Isle of Man, Northern Ireland and Scottish Isles.

2. Any fault that is not reported within 10 working days of being discovered.
3. Service calls to equipment under warranty, or service calls made under chargeable arrangements will be carried out in accordance with standard conditions of sale. Unless otherwise specified, a maximum of 15 minutes of administrative time, not spent directly carrying out servicing work, is provided for within the supply. Any requirement for staff attending the call to spend greater time than 15 minutes due to administrative requirements, such as on waiting time or security clearance, or health and safety risk assessments, will be chargeable at our prevailing rate.

We reserve the right to apply Time Travel & Call out charges if no fault is found with the product or access is either restricted or denied to our attending engineer.

4. No claim shall exceed the original selling price.
5. Claims for Food and / or contents stored in the equipment supplied (including pharmaceutical or other items) and any consequential loss how so ever arising are excluded under our warranty terms.
6. Components including gaskets, doors, drawers, handles, shelves, tray slides, all internal fixings, plug and lead, connectors, the outer shell, castors / legs, food probes, refrigerant and blockages as well as consumable items such as (but not limited to) batteries, fuses, light bulbs, printer cartridges, keys, glass and paper roll.
7. Equipment manufactured to the customers' own design, Williams Refrigeration will not be liable for any defect, non performance or improper operation of the equipment arising from any drawing design or specification supplied by the customer, their representative or agent.
8. Second hand equipment.
9. The customer uses or installs the equipment in such a way that it exceeds its design envelope or operates the equipment at control parameters other than those provided as standard factory settings.
10. The customer fails to observe commonly accepted operating practices.

11. The customer has not properly cleaned or maintained the equipment or carried out necessary servicing, including cleaning of the condenser, in accordance with instructions, literature or directions issued by Williams Refrigeration. (Operating Instructions are supplied with all equipment but also available at [www.williams-refrigeration.co.uk](http://www.williams-refrigeration.co.uk)).
12. Equipment fails through improper installation by others, misuse, abuse, accidental damage, power loss or fluctuations, fire, flooding or acts of god.
13. Any third party item(s) connected to the equipment that may affect performance.
14. The customer permits persons other than those authorised by Williams Refrigeration to perform or affect repairs or adjustments to the equipment.
15. If authorised representatives of Williams Refrigeration are denied full and free rights of access to the equipment for inspection during normal business hours as previously stated.
16. If repairs are made using spare parts or replacement items not supplied or preauthorised by Williams Refrigeration.
17. The initial equipment supply date shall apply for warranty validity for the subsequent supply of replacement of parts or products.

### EXTENDED WARRANTY

Extended Warranty offers the opportunity to protect your equipment (subject to conditions outlined) for an additional period of up to 5 years inclusive of original warranty periods.

Should you require Extended Warranty, state on your order or notify the Dealer or Williams Sales Manager at the time of purchase and they will be able to arrange it for you.

To ensure your Extended Warranty Policy remains valid, at least one maintenance / service visit per year must take place in years 2, 3, 4 and 5.

**For further information or clarification please call 01553 817000 or email to [info@williams-refrigeration.co.uk](mailto:info@williams-refrigeration.co.uk) or write to Williams Refrigeration, Bryggen Road, King's Lynn, Norfolk, PE30 2HZ**



## Design Excellence : Cool Technology

### Williams Refrigeration

Bryggen Road  
North Lynn Industrial Estate  
King's Lynn  
Norfolk PE30 2HZ  
Sales Tel: +44 1553 817000  
Sales Fax: +44 1553 817111  
Spares Tel: +44 1553 817017  
Spares Fax: +44 1553 817020

info@williams-refrigeration.co.uk  
www.williams-refrigeration.co.uk

### Williams Silver Frost

2 rue Conventionnel Huguet  
23000 GUERET  
France  
Tel: +33 5 55 52 27 88  
Fax: +33 5 55 62 10 61

info@williams-refrigeration.fr  
www.williams-refrigeration.fr

### Williams Dubai

PO Box 333215  
607 Building 1B  
Dubai Design District  
Dubai  
United Arab Emirates  
Tel: +971 4 510 8203

sales@williams-dubai.com

### Williams Refrigeration Australia

38-42 Gaine Road  
Dandenong South, Victoria 3175  
Australia  
Tel: +61 3 8787 4747  
Fax: +61 3 8787 4787

sales@williamsref.com.au  
www.williams-refrigeration.com.au

### Williams Refrigeration Hong Kong

Unit C, 12/F., Roxy Industrial  
Centre,  
58 - 66 Tai Lin Pai Road, Kwai  
Chung,  
New Territories, Hong Kong  
Tel: +852 2407 5422  
Fax: +852 2407 3767

sales@williams-hongkong.com  
www.williams-refrigeration.com.hk



[www.williams-refrigeration.com](http://www.williams-refrigeration.com)

Williams Refrigeration is a trading name of AFE Group Limited.  
Registered in England & Wales under Registered Number  
3872673. Registered Office Address - Bryggen Road,  
North Lynn Industrial Estate, King's Lynn, Norfolk, PE30 2HZ

